



Coffee System

Installation Guide

Guía de instalación

Guide d'installation

Guida all'installazione

Installationsanleitung

Installatiehandleiding

安装指南



Contents

- 2 Coffee System
- 3 Safety Precautions
- 4 Specifications
- 5 Installation
- 7 Troubleshooting

Features and specifications are subject to change at any time without notice.

Important Note

To ensure this product is installed and operated as safely and efficiently as possible, take note of the following types of highlighted information throughout this guide:

IMPORTANT NOTE highlights information that is especially important.

⚠ CAUTION

Indicates a situation where minor injury or product damage may occur if instructions are not followed.

⚠ WARNING


States a hazard that may cause serious injury or death if precautions are not followed.

IMPORTANT NOTE: Save these instructions for the local electrical inspector.

Product Information

Important product information, including the model and serial number, are listed on the product rating plate. The rating plate is found on the right side, behind the front frame. The unit must be slid forward to view the rating plate. Refer to the illustration below.

If service is necessary, contact your authorized Wolf dealer.

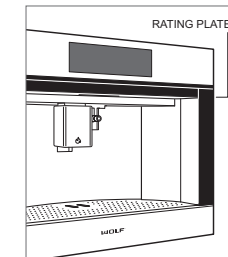

Rating plate location

IMPORTANT INSTRUCTIONS

⚠ CAUTION

Install this appliance in accordance with the provided installation instructions.

Installation must be performed by a qualified professional in compliance with legislation in force in the country of installation.

The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children.

Never install the appliance in rooms where the temperature may drop to 0°C or lower.

Customize the water hardness as soon as possible following the instructions in the use and care guide.

⚠ CAUTION

Safety cutout devices must be included in the main power supply in compliance with the installation regulations in the country concerned.

⚠ CAUTION

Slide support material must have a thickness suited for the screws provided. The material must be able to support 25 kg.

⚠ CAUTION

Do not leave the machine pulled out of the opening when not in use.

Do not allow children and animals to stop or linger near the appliance when it is pulled out of the opening.

⚠ WARNING

Check that the main power supply voltage corresponds to the value indicated on the rating plate on the side of the appliance.

Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 15 amps only.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

To comply with safety directives, an omnipolar switch with a minimum contact distance of 3 mm must be installed.

Do not use multiple sockets or extensions.

Installation Requirements

The Coffee System can be installed in a standard or flush inset application. The sides of the cabinet opening must be adequate to support installation of the mounting slides. Refer to the illustration below.

Specify one opening if a Coffee System is installed above a Cup Warming Drawer.

Finish the edges of the opening. They may be visible when the door is open.

For standard installations, the face trim overlaps stiles and rails. Refer to the chart below.


For flush inset installations, a minimum 3 mm reveal is required on all sides. Each corner of the opening must be exactly 90° to maintain consistent reveals.

BASE SUPPORT

Coffee System	45 kg
---------------	-------

TRIM OVERLAP

Top	5 mm
Bottom	0 mm
Sides	18 mm

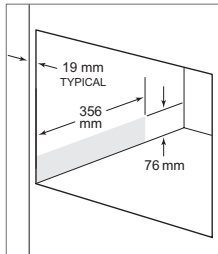

Slide support dimensions

Electrical Requirements

Installation must comply with all applicable electrical codes and be properly grounded (earthed).

Locate the electrical supply as shown in the following illustrations. A separate circuit servicing only this appliance is required. A ground fault circuit interrupter (GFCI) is not recommended and may cause interruption of operation.


REQUIRED POWER SUPPLY

Electrical Supply	220-240 VAC, 50/60 Hz
Service	1350 W
Receptacle	grounding-type (earthed)
Power Cord	1.8 m


IMPORTANT NOTE: Connection of this appliance should be through a fused connection unit or a suitable isolator, which complies with national and local safety regulations. The on/off switch should be easily accessible after the appliance has been installed. If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles of the power supply. When switched off there must be an all-pole contact gap of 3 mm in the isolator switch. This 3 mm contact disconnect gap must apply to any isolator switch, fuses and/or relays according to EN60335.

Coffee System


STANDARD INSTALLATION

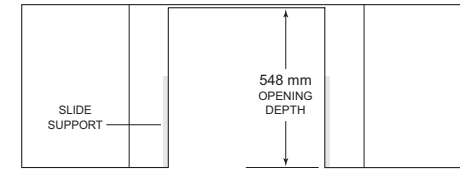

TOP VIEW

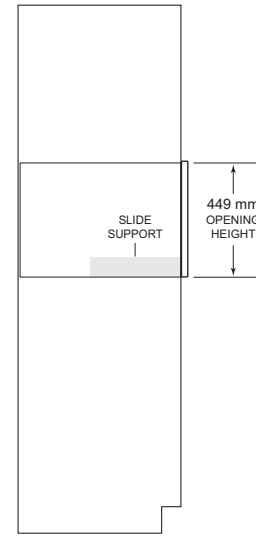

SIDE VIEW

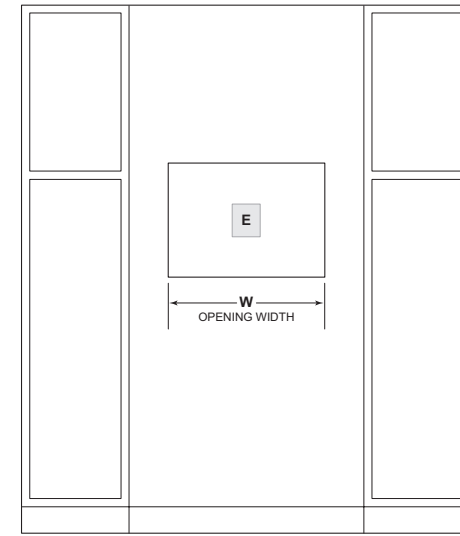


FRONT VIEW

NOTE: 610 mm model and model with 762 mm trim require the same opening dimensions.

OPENING WIDTH	W
610 mm Model	562 mm
762 mm Model	562 mm

Coffee System

FLUSH INSET INSTALLATION

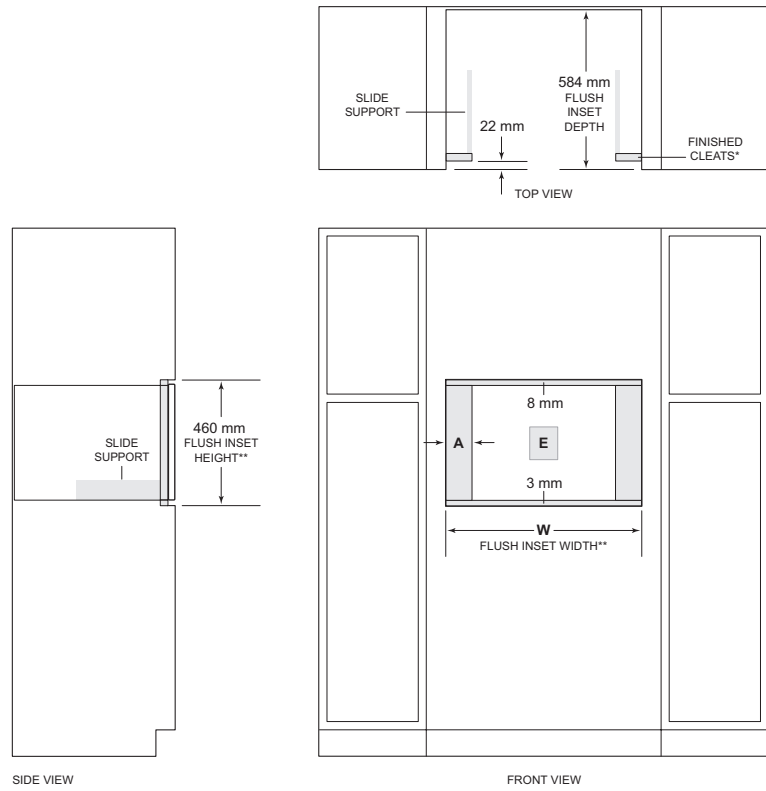


*Will be visible and should be finished to match cabinetry.
 **Dimension provides minimum reveals.

OPENING WIDTH	W	A
610 mm Model	603 mm	21 mm
762 mm Model	765 mm	102 mm

Preparation

IMPORTANT NOTE: When installed above a Cup Warming Drawer, use the top surface of the Warming Drawer as a reference to position the slides (there will be no surface to rest the slides on).


- 1 Secure the provided power cord clip to the top of the cabinet opening, centered and approximately 356 mm back from the front edge. Refer to the illustration below.
- 2 Verify the sides of the cabinet opening are adequate to support installation of the slides. If necessary, install additional side cleats to maintain the opening width.
- 3 The provided spacer material can be added under or to the sides of the cabinet.

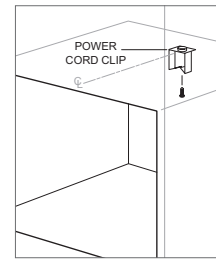


Power cord clip

Installation

- 1 Center the bottom trim in the opening.
- 2 Align the front edge of the bottom trim with the front of the opening. Refer to the illustration below.
- 3 Align the holes on the bottom of each slide with the studs on the trim, then place the slides on the bottom trim.
- 4 Verify the distance between the slides is 470 mm. Refer to the illustration below.
- 5 If necessary, use the shim material provided, then secure the slides to the cabinet with 12 screws per slide.
- 6 Extend the slides to full extension.
- 7 Place the unit on the slides.

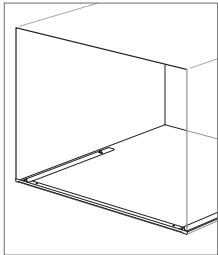


Bottom trim alignment

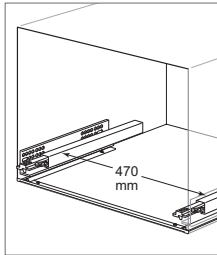

Slide installation


- 8 Rotate the leveling cams to level the front of the unit, then push the locking tabs. Refer to the illustration below.
- 9 Install and hand-tighten a screw from the bottom of each slide to secure the unit to the slides.
- 10 Plug the power cord into the receptacle.
- 11 Place the cord into the clip at the top of the opening.

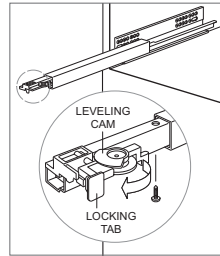


Level unit

Prior to Use


- 1 Slide the unit forward and press the main power button. Refer to the illustration below.
- 2 Use the test strip provided to determine water hardness. Refer to User Options in the Use and Care Guide to adjust the hardness setting.
- 3 Clean the unit thoroughly with hot water and a mild detergent.
- 4 Rinse and dry with a soft cloth.
- 5 Open the service door, then remove the water tank. Refer to the illustration below. NOTE: If installed, the water spout must be removed to open the service door.
- 6 Fill the water tank with water.

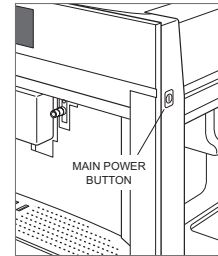


Main power button

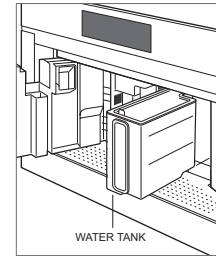

Water tank

- 7 Insert the hot water spout. Two beeps indicate the spout is installed correctly. Refer to the illustration below.
- 8 Place the rinse container below the spout.
- 9 Select the desired language. To select, scroll through the languages until the desired language appears, then touch the corresponding icon.
- 10 Touch  OK. Hot water is dispensed from the hot water spout.

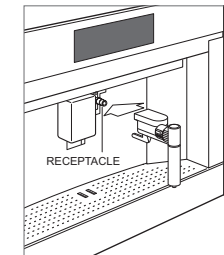

Hot water spout

Troubleshooting

Before contacting Wolf Factory Certified Service, use these helpful tips to prevent the need for a service visit.

Coffee dispensed too slow.

- 1 Adjust the grind to coarser pre-ground coffee. Refer to Grind Adjustment in the Use and Care Guide.

Infuser cannot be removed.

- 1 Touch the standby power button to reset the infuser position.

Milk contains bubbles or little froth.

- 1 Use fully skimmed or semi-skimmed milk.
- 2 Adjust the froth setting.
- 3 Clean the milk container and lid.