



# Coffee System

## *Use and Care Guide*

---

Guía de uso y mantenimiento

---

Guide d'utilisation et d'entretien

---

Guida all'uso e alla manutenzione

---

Bedienungs- und Pflegeanleitung

---

Gids voor gebruik en onderhoud

---

使用和维护指南



Contents

- 2 Coffee System
- 3 Safety Precautions
- 8 Quick Start Guide
- 11 Operation
- 14 Care Recommendations
- 16 Troubleshooting
- 17 Wolf Warranty

Customer Care

The model and serial number are listed on the product rating plate. Refer to page 8 for rating plate location.

For warranty purposes, the date of installation and the name of the authorized Wolf dealer are required. Record this information below for future reference.

If your product ever needs attention, be sure to use a Wolf factory certified service provider.

SERVICE INFORMATION

Model Number
Serial Number
Date of Installation
Certified Service Name
Certified Service Number
Authorized Dealer
Dealer Number

Important Note

To make sure this product is installed and operated safely and efficiently, take note of the following types of highlighted information throughout this guide:

**IMPORTANT NOTE:** highlights information that is especially important.

**⚠ CAUTION**

Indicates a situation where minor injury or product damage may occur if instructions are not followed.

**⚠ WARNING**

States a hazard that may cause serious injury or death if precautions are not followed.

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Make sure the voltage of your electrical system corresponds to the voltage shown on the machine.
- To protect against electrical shock, do not immerse cord or plug in water or other liquid.
- Persons that lack physical, sensory, or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person.
- Before service or maintenance, disconnect power at the main switch and unplug the unit.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Unplug from outlet when not in use and prior to cleaning. Allow to cool before putting on or taking off parts.
- Do not open the outer casing of the appliance.
- Do not allow the cord to hang over edge of table or counter or touch hot surfaces.
- Do not submerge the cord or plug in water or other liquids.

## IMPORTANT SAFEGUARDS

- Do not place on or near a hot gas or electric burner or in a heated oven.
- Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for anything other than intended use.
- A short power cord is provided to reduce risks of becoming entangled or tripping over the cord.
- The appliance must be properly installed prior to operation to make sure no electrical components are accessible. Make sure power is not supplied to the appliance while installation work, repairs, or maintenance is done.
- Do not use an extension cord to connect the appliance to electricity. Extension cord does not guarantee the required safety of the appliance (danger of overheating).
- Verify the appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and effective grounding system. It is imperative this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy, of an effective grounding system.

# IMPORTANT SAFEGUARDS

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Installation work and repairs must be done by a trained technician in accordance with national and local safety regulations. Repairs and other work by unauthorized persons could be dangerous and may void the warranty.
- Use only original spare parts. Only then can the manufacturer guarantee the safety of this machine.
- Never open the outer casing of the appliance. Tampering with electrical connections or components and mechanical parts is dangerous and may cause machine damage.
- Descale the appliance regularly with descaling solution. In areas with very hard water, the machine may need to be descaled more often. The manufacturer cannot be held responsible for damages resulting from insufficient descaling.
- Never use a steam cleaner to clean the appliance.
- Never make coffee, hot water, or steam when the appliance is removed from the opening. Always make sure the appliance is inactive before removing it. The only exception is adjusting the coffee mill, which must be done with the machine out.

## IMPORTANT SAFEGUARDS

### WARNING

Do not look directly or with an optical instrument into the lighting.

### WARNING

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### WARNING

Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### WARNING

Risk of burns when dispensing hot beverages.

## IMPORTANT SAFEGUARDS

### WARNING

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazard involved.

### WARNING

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children aged less than 8 years.


### WARNING

Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

## Coffee System Features

### FEATURES

- 1 Product Rating Plate
- 2 Touchscreen
- 3 Coffee Spout
- 4 Water/Milk Spout Receptacle
- 5 Water Tank (behind service door)
- 6 Service Door
- 7 LED Lighting
- 8 Drip Tray
- 9 Standby Power Button
- 10 Main Power Button (behind control panel)
- 11 Handle (to slide unit forward)
- 12 Milk Container
- 13 Water Spout

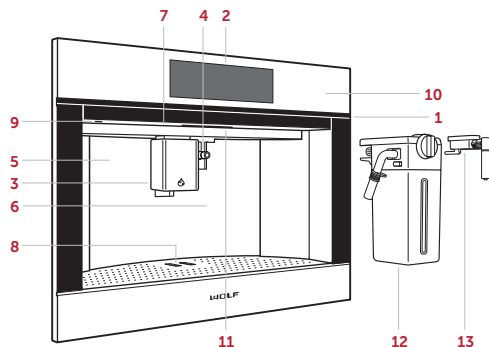


## Controls

The Wolf Coffee System uses touchscreen technology to select preferences and other options.




## Prior to Use

- 1 Slide the unit forward and press the main power button.

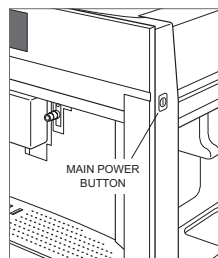


- 2 Use the test strip provided to determine water hardness. Refer to User Options on page 11 to adjust the hardness setting.
- 3 Clean the unit thoroughly with hot water and a mild detergent.
- 4 Rinse and dry with a soft cloth.
- 5 Open the service door, then remove the water tank.

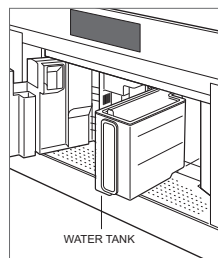

NOTE: If installed, the water spout must be removed to open the service door.

- 6 Fill the water tank with water.
- 7 Insert the hot water spout. Two beeps indicate the spout is installed correctly.

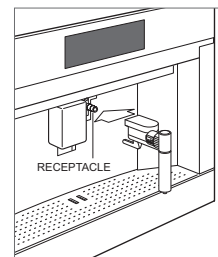


- 8 Place the rinse container below the spout.
- 9 Select the desired language. To select, scroll through the languages until the desired language appears, then touch the corresponding icon.
- 10 Touch OK. Hot water is dispensed from the hot water spout.




### Auto-Off

The unit turns off automatically after 30 minutes of inactivity. The duration is adjustable to 15, 30, 60, 120, or 180 minutes. Touch the standby power button to turn on the control panel touchscreen before use.

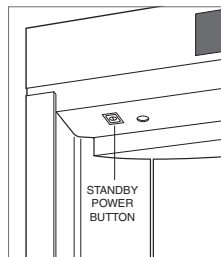

NOTE: Due to the rinsing process, place the rinse container below the spout before each use.

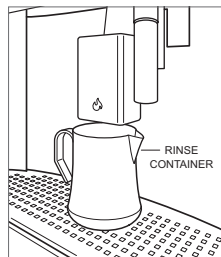

#### To adjust Auto-Off duration:

- 1 Touch .
- 2 Touch ◀ or ▶ until "Auto-Off" appears on the touchscreen.
- 3 Touch "Auto-Off" until the desired duration appears.
- 4 Touch BACK.

### Milk Container

#### To froth milk:

- 1 Turn the knob on the milk container to "Insert."
- 2 Place the milk container into the receptacle. A beep indicates the container is installed correctly.
- 3 Turn the knob to the desired froth setting. Refer to the chart below.
- 4 Turn the knob to "Clean" when dispensing is complete.
- 5 Follow the instructions on the display.
- 6 Remove the milk container and store in the refrigerator.

#### FROTH SETTING

The milk container dial is adjustable for optimum froth production.

SETTING	AMOUNT
	No Froth
	Minimum Froth
	Maximum Froth

### Coffee Drinks

**IMPORTANT NOTE:** Do not use oily, caramelized, or flavored beans.

#### To make coffee drinks:

- 1 Touch multiple times to select the desired strength.
- 2 Touch / multiple times to select the desired size.
- 3 Touch the desired drink type to start the cycle.
- 4 Adjust the height of the coffee spout to be as close to the cup as possible.

NOTE: Near the end of the cycle, +Extra appears on the touchscreen. If desired, touch +Extra to continue dispensing water over the grounds to increase the drink volume. Touch STOP once the desired volume is dispensed.

### Cleaning

The Coffee System should be cleaned and maintained often to make sure it operates efficiently. Refer to Care Recommendations on page 14 for more information.

## Beverage Options

BEVERAGE	% COFFEE	% MILK	% WATER	FROTH	SMALL	MEDIUM*	LARGE	X-LARGE
Espresso	100				30 mL	41 mL	47 mL	121 mL
Espresso x2 <sup>†</sup>	100				59 mL	80 mL	95 mL	240 mL
Doppio+	100				95 mL	121 mL	145 mL	180 mL
Coffee	100				145 mL	180 mL	216 mL	240 mL
Long Coffee <sup>†</sup>	100				127 mL	160 mL	192 mL	240 mL
Coffee Pot	100				299 mL	450 mL	600 mL	751 mL
Americano	25		75		121 mL	151 mL	180 mL	225 mL
Latte	20	80		None	240 mL	299 mL	361 mL	450 mL
Macchiato	60	40		Max	41 mL	50 mL	59 mL	74 mL
Latte Macchiato	20	80		Med	121 mL	151 mL	180 mL	225 mL
Cappuccino**	55	45		Max	121 mL	151 mL	180 mL	225 mL
Cappuccino Mix <sup>††</sup>	55	45		Max	121 mL	151 mL	180 mL	225 mL
Cappuccino+	65	35		Max	121 mL	189 mL	228 mL	284 mL
Flat White	25	75		Med	207 mL	260 mL	311 mL	390 mL
Hot Milk		100		Any	192 mL	240 mL	287 mL	361 mL
Hot Water			100					251 mL <sup>††</sup>
Steam			100					89 mL <sup>††</sup>

\*Default quantity. Touch  to customize. <sup>†</sup>Intended for two separate cups. <sup>†</sup>Double strength. \*\*Milk dispensed, then coffee. <sup>††</sup>Milk and coffee dispensed simultaneously.

<sup>††</sup>Touch stop at any time for smaller quantity.





NOTE: All quantities are estimates. Actual results  $\pm$  20%.



## Operation


### Water Filter



The water filter contains ion exchange resins and active carbons, which reduce limescale and absorb chlorine and other contaminants. Replace the filter every two months or every three weeks, if left unused.

#### To install the water filter:

- 1 Remove the new filter from the package.
- 2 Touch .
- 3 Touch  or  until "Water Filter" appears on the touchscreen.
- 4 Touch "Water Filter."
- 5 Turn the dial on the filter until the following two months numbers appear. "Turn the dial indicator until the next 2 months are displayed" appears on the touchscreen.
- 6 Touch .
- 7 Turn the filter upside down and place it under a running faucet for one minute. "Run water into filter hole until it comes out from openings" appears on the touchscreen.

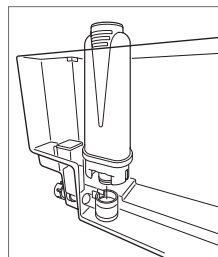- 8 Touch  NEXT.
- 9 Insert the filter into the (full) water tank for 10 seconds to allow bubbles to escape. "Immerse filter in the water tank letting air bubbles escape" appears on the touchscreen.
- 10 Touch  NEXT.
- 11 Align the filter with the housing at the bottom of the tank. "Insert filter into its housing and push it down to bottom" appears on the touchscreen.




- 12 Press to secure the filter to the housing. "Insert water tank" appears on the touchscreen.
- 13 Close the tank lid, then install the water tank on the machine. "Place 0.5 L container under outlets, press OK to fill filter" appears on the touchscreen.
- 14 Place a container under the hot water spout and touch  OK.
- 15  appears on the touchscreen to indicate the water filter reminder is turned on.

### User Setup

The User Setup feature allows the user to select from the preferences listed below.

#### USER OPTIONS



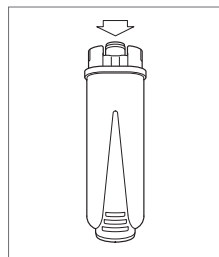


Rinsing	Start rinse cycle.
Descale	Turn descale cycle on.
Water Filter	Turn water filter reminder on or off.
Drink Settings	View drink settings (Strength, Milk, Coffee).
Set Time	Adjust time of day. Required for Auto-Start.
Auto-Start	Turns unit on, rinses, and heats at preset time.
Auto-Off	Turn unit off after 15 min, 30 min, 1 hr, 2 hr, or 3 hr.
Energy Saving	Turns energy saving mode on or off.
Coffee Temperature	Adjust coffee temperature (Low, Medium, High, Max).
Water Hardness	Adjust water hardness (1 softest, 4 hardest).
Set Language	Select language (English, Spanish, French, Italian, German, Dutch, or Chinese).
Beep	Turn audible tone on or off.
Cup Lighting	Turn lights on or off.
Background	Adjust touchscreen background color (Black, White).
Demo Mode	Provides a demonstration for common functions.
Factory Settings	Reset to factory default settings.
Statistics	View beverage production quantities.




## User Setup

### USER OPTIONS







#### To set user options:

- 1 Touch .
- 2 Touch .
- 3 Touch  or  to scroll through options.
- 4 Touch the desired option.
- 5 Touch  BACK to exit.

### AUTO-START

Auto-Start turns the unit on, rinses, and preheats at a specified time to decrease the time to prepare a drink. The clock must be set to the correct time to work properly.  appears on the touchscreen when Auto-Start is turned on.


#### To set Auto-Start:

- 1 Touch .
- 2 Touch  or , then touch "Auto-Start."
- 3 Touch  or  until the desired start time appears.
- 4 The unit defaults to "Off." Touch "Off" to toggle "On."
- 5 Touch  ok.

## Coffee


#### To use whole beans:

- 1 Pull the unit forward.
- 2 Open the whole bean compartment lid.

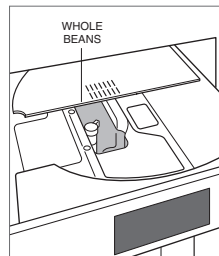

- 3 Fill the compartment, then slide the unit back in.
- 4 Place a minimum 120 mL container below the spout.



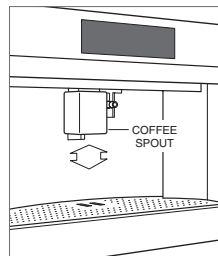


 
- 5 Adjust the height of the spout to be as close to the cup(s) as possible.



- 6 The unit automatically rinses upon initial start-up and before turning off. A small amount of liquid dispenses from the spout during the rinse cycle. Place the rinse container under the spout, if desired.

## Favorite

#### To save favorite drink settings:


- 1 Touch  to select the desired user profile.
- 2 Touch .
- 3 Select the desired drink option.
- 4 Touch + or - to select the desired strength.
- 5 Touch  ok.
- 6 Turn the milk container dial to .
- 7 Milk is dispensed. Touch  stop when the desired amount of milk is dispensed and to save the setting.
- 8 Coffee is dispensed. Touch  stop when the desired amount of coffee is dispensed and to save the setting.

### Coffee Pot

#### ⚠ CAUTION

**Do not use pre-ground coffee. Use whole beans only.**

The Coffee Pot option produces larger amounts of coffee.



The coffee strength and size are adjustable, or touch  to customize. Refer to Beverage Options on page 10. Make sure the water tank is full and the grounds container is empty before starting the cycle.


### Pre-Ground Coffee



#### ⚠ CAUTION

**More than one scoop causes the unit to clog.**

#### To use pre-ground coffee:

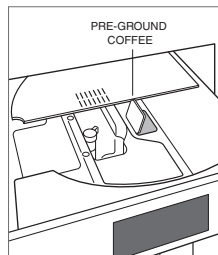- 1 Touch  multiple times until  appears.
- 2 Slide the unit forward and open the pre-ground coffee lid.




- 3 Use the provided scoop to place one scoop of preground coffee into the funnel, then close the lid.
- 4 Slide the unit back into position.
- 5 Touch / multiple times to select the desired size.
- 6 Touch the desired drink type to start dispensing.
- 7 Adjust the height of the coffee spout as close to the cup as possible.



### Hot Water

Dispense hot water to make tea or preheat cups. Preheating cups allow beverages to stay hot longer.

#### To dispense hot water:

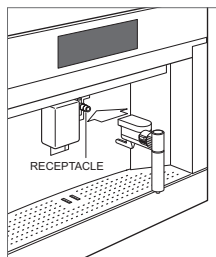- 1 Insert the hot water spout. Two beeps indicate the spout is installed correctly.




- 2 Place a cup under the spout.
- 3 Touch  to start dispensing water.
- 4 Touch  when the desired amount is dispensed.

### Grind Adjustment

#### ⚠ CAUTION

**Adjustment must be made while the mill is operating. The grind adjustment can take up to three drinks to become noticeable. Do not adjust more than one setting per grind.**

Adjust the grind if coffee delivery is too fast or too slow. Turn the dial clockwise for faster delivery (coarser grind) or counterclockwise for slower delivery (finer grind).

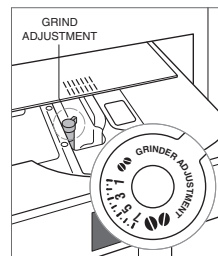

### Milk Container


#### ⚠ CAUTION

Only the milk container liner is dishwasher safe. Do not place any other milk container parts in the dishwasher. Do not submerge the lid or the milk container in water.


Use hot water and a mild detergent to wash the lid and milk container.

#### To clean the milk container:


- 1 Press the tabs on both sides of the milk container lid, then remove the lid.
- 2 Pull the intake tube down to remove.
- 3 Pull the milk spout back to remove.

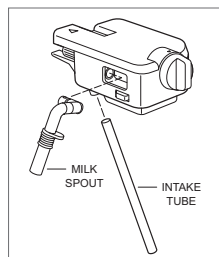

- 4 Rotate the froth adjustment knob to "Insert," then pull the knob to remove.
- 5 Use a toothpick to remove any debris from the channel on the knob.

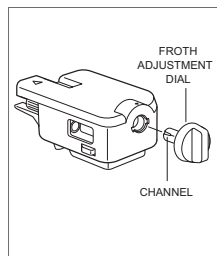

- 6 Remove the liner from the milk container.

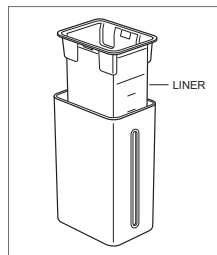


### Descalc





#### ⚠ CAUTION

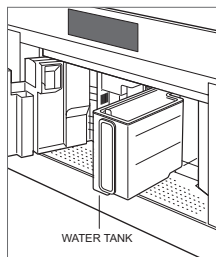

Only use EcoDecalk descaling solution.

#### To descale the unit:

- 1 Remove the water tank and empty completely.



- 2 Pour descaling solution into the tank to line "A", then add water until it reaches line "B."
- 3 Install the water tank.
- 4 Install the water spout, then place a large, minimum 2.5 L, container under the spout.
- 5 Touch 
- 6 Touch  or  until "Descalc" appears on the touchscreen.
- 7 Touch 

- 8 "Descaling" and a progress bar appear on the touchscreen.
- 9 After approximately 25 minutes, "Rinse and fill water tank up to max level" appears. Rinse and fill the water tank with water and empty the container.
- 10 Install the water tank and place the container under the spout.
- 11 Touch  NEXT. "Rinsing please wait" appears on the touchscreen. The water tank may need to be filled multiple times to complete the descale process.
- 12 When "Descalc complete press OK" appears, fill the water tank, and touch  OK.

## Care Recommendations

### Cleaning

Use the following information for simple cleaning recommendations.

#### STAINLESS STEEL

- 1 Use a non-abrasive stainless steel cleaner and apply with a soft lint-free cloth.
- 2 Lightly wipe the surface with a water-dampened microfiber cloth followed by a dry polishing chamois.
- 3 Always follow the grain of the stainless steel.

#### TOUCHSCREEN

- 1 Use a spray degreaser to remove fingerprints and food soil. Spray on a cloth before wiping the touchscreen.

#### COFFEE SPOUT


- 1 Clean periodically using a sponge.
- 2 Remove any coffee deposits in the holes with a toothpick.

#### WATER TANK

- 1 Clean periodically (about once a month) with a damp cloth and mild dish soap.
- 2 Rinse and towel dry.

#### DRIP TRAY AND GROUNDS CONTAINER

- 1 Empty and clean the drip tray before the water level indicator protrudes from the cup tray.
- 2 Empty and clean the grounds container when "Empty grounds container" appears.
- 3 Open the service door.
- 4 Remove and empty the drip tray and grounds container.

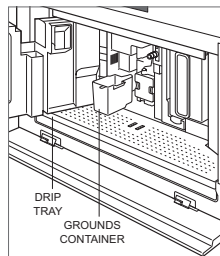

- 5 Wash with warm water and mild dish soap.
- 6 Rinse and towel dry.

#### PRE-GROUND COMPARTMENT


- 1 Check periodically to verify the pre-ground coffee funnel is not blocked.

#### INTERIOR

- 1 Open the service door.
- 2 Vacuum residue and remove coffee deposits with a sponge.

#### INFUSER

- 1 Clean the infuser at least once a month.
- 2 Turn the unit off.
- 3 Open the service door and remove the drip tray and grounds container.
- 4 Press the two red buttons inward and remove the infuser.

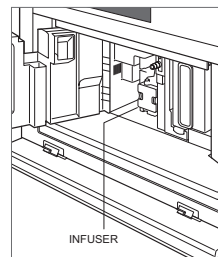

- 5 Soak in water approximately five minutes, then rinse and towel dry. NOTE: Do not use detergent to clean the infuser. It will remove the lubricant on interior parts.
- 6 Slide the infuser onto the internal support and bottom pin, then press "Push" until it clicks.
- 7 Verify the red buttons are pushed out.