



WARMING DRAWER USE AND CARE GUIDE

GUÍA DE USO Y MANTENIMIENTO

GUIDE D'UTILISATION ET D'ENTRETIEN

GUIDA ALL'USO E ALLA MANUTENZIONE

BEDIENUNGS-UND PFLEGEANLEITUNG

GIDS VOOR GEBRUIK EN ONDERHOUD

使用和保養指南



Contents

- 2 Safety Precautions
- 4 Warming Drawer Features
- 4 Warming Drawer Operation
- 6 Care Recommendations
- 6 Troubleshooting
- 7 Wolf Warranty

Customer Care

The model and serial number are listed on the product rating plate. Refer to page 4 for rating plate location. For warranty purposes, you will also need the date of installation and name of your authorized Wolf dealer. Record this information below for future reference.

SERVICE INFORMATION

Model Number
Serial Number
Date of Installation
Certified Service Name
Certified Service Number
Authorized Dealer
Dealer Number

Important Note

To ensure this product is installed and operated as safely and efficiently as possible, take note of the following types of highlighted information throughout this guide:

IMPORTANT NOTE highlights information that is especially important.

CAUTION indicates a situation where minor injury or product damage may occur if instructions are not followed.

WARNING states a hazard that may cause serious injury or death if precautions are not followed.

SAFETY PRECAUTIONS

IMPORTANT SAFEGUARDS

⚠ WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

 
IMPORTANT SAFEGUARDS

- Read this use and care guide carefully before using your new warming drawer to reduce the risk of fire, electric shock or injury to persons.
- To protect against electrical shock do not immerse cord or plug in water or other liquid.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not repair or replace any part of the warming drawer unless specifically recommended in literature accompanying this appliance. All service should be referred to Wolf factory certified service.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors (model ICBWWD30).
- Do not use appliance for other than intended use.
- Do not touch the heating element or the interior surface of the warming drawer. These surfaces may be hot enough to burn. The inside surfaces of the warming drawer may be hot when opened.
- Do not use aluminum foil to line the warming drawer. This may cause damage to interior surfaces of the warming drawer.
- Do not heat unopened food containers, such as baby food jars and cans. Pressure build-up may cause the container to burst and cause injury.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Ensure that towels are stacked only as high as the sides of the drawer pan. Any higher may result in discoloration of the towels.
- Do not place more than 27 kg into the warming drawer.

Warming Drawer Features

FEATURES

1	Product Rating Plate
2	Hidden Control Panel
3	Removable Rack
4	Drawer Pan
5	Full-Extension Drawer Glides

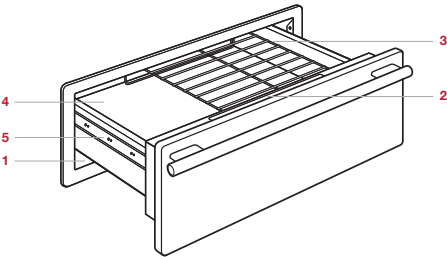

Warming drawer.

Getting Started

We know you are eager to start cooking, but before you do, please take some time to read this use and care guide. Whether you are an occasional cook or an expert chef, it will be to your benefit to familiarize yourself with the safety practices, features, operation and care recommendations of your Wolf warming drawer.





To ensure all residual oil from the manufacturing process has been removed, clean the warming drawer thoroughly with hot water and a mild detergent prior to use. Rinse and dry with a soft cloth. Refer to care recommendations on page 6.

Wolf warming drawers can be used to warm or crisp food, proof dough or warm plates or towels. Model WWD30O is approved for outdoor use.

Control Panel





The electronic control panel features touch controls and a visual display. Refer to the illustration below. The control panel is hidden when the warming drawer is closed. Open the drawer to access the control panel.





Temperature


The warming drawer features four preset temperature settings; , ,  and . During preheat, the temperature display will alternate between the set point and the actual temperature. 'Lo' will appear until the temperature reaches 30°C. An audible chime indicates preheat is complete. Refer to the chart below.

IMPORTANT NOTE: When warming towels, temperature can not exceed 50°C.

Setting temperature:

- 1 Touch .
- 2 Touch one of the PRESETS to select the preset temperature or touch   or  arrows to select the desired temperature.

SETTING	PRESET	RANGE
 (PROOF)	30°C	25–40°C
 (LOW)	50°C	25–95°C
 (MEDIUM)	70°C	25–95°C
 (HIGH)	95°C	25–95°C

 




Control panel.

Timer

The warming drawer has a built-in timer that will automatically turn off after four hours of use. The timer can be adjusted from one minute to 24 hours.








Setting timer:

- 1 Select desired temperature.
- 2 Touch   or  arrows to select the desired time. 'TIMER' and the shut off time will appear in the display.

Custom Preset Setting

Customize a preset temperature setting using desired temperature and timing duration (one minute to 24 hours) with automatic shut off.

Setting custom preset temperature and automatic shut off:








- 1 Touch .
- 2 Touch and hold the desired preset for 5 seconds until 'TIMER' and '4:00' appear in the display.
- 3 Touch   or  arrows to select the desired temperature.
- 4 Touch   or  arrows to select the desired automatic shut off timing duration.
- 5 Touch and hold the desired preset again for 5 seconds to save the settings.

Extended Options

TEMPERATURE UNIT

The warming drawer temperature can be displayed in Fahrenheit or Celsius.








Adjusting temperature unit:

- 1 With the warming drawer off, touch and hold the   or  arrows for 5 seconds.
- 2 Touch   or  arrows to alternate between units.
- 3 Once desired unit is displayed, touch .

BACKLIGHT

The warming drawer control panel has three backlight settings; off, on in Sabbath or off in Sabbath.

Adjusting backlight:




 

- 1 With the warming drawer off, touch and hold the   or  arrows for 5 seconds.
- 2 Touch   or  arrows to alternate between settings.
- 3 Once desired setting is displayed, touch .

Sabbath

This appliance is certified by Star-K to meet strict religious regulations in conjunction with specific instructions found on www.star-k.org.

Sabbath overrides the automatic shut off feature. Sabbath must be reset after a power outage.

Setting Sabbath mode:

- 1 Touch and hold  until 'Sab' appears on the control panel display.
- 2 Touch one of the PRESETS to select the preset temperature or touch   or  arrows to select the desired temperature.
- 3 To cancel, touch .

Care Recommendations

CLEANING

Stainless steel	Use a nonabrasive stainless steel cleaner and apply with a soft lint-free cloth. To bring out the natural luster, lightly wipe surface with a water-dampened microfiber cloth followed by a dry polishing chamois. Always follow the grain of stainless steel. The stainless steel drawer pan is removable for cleaning. To remove, open drawer completely. Slide finger-tips under side edges of pan, pull up and out.
Control panel	Use a spray degreaser to remove fingerprints and food soil. Spray on a cloth before wiping panel. Do not spray cleaners directly on the control panel.
Removable Rack	Clean with hot water and mild detergent or paste of baking soda and water. Towel dry.
Interior	Wipe with a soft damp cloth. Do not use abrasive or harsh cleaners or scouring pads. For heavier soil, use baking soda or a mild soap; rinse thoroughly with hot water.
Drawer Guides	Remove food crumbs from drawer guides. Wipe with a soft dry cloth.

Troubleshooting

Warming drawer does not operate.

- Verify power is on.
- Verify electrical power to warming drawer and home circuit breaker is on.

Drawer does not slide smoothly.

- Drawer is out of alignment. Fully extend the drawer and close completely to realign.
- Drawer is overloaded. Reduce weight to less than 27 kg.
- Redistribute contents to balance load.

Excessive condensation.

- Remove liquid in drawer pan.
- Cover food with lid or aluminum foil.
- Temperature setting is too high. Use lower setting.

No heat in proof setting.

- Verify PROOF is illuminated on the control panel display.
- Room temperature may prevent thermostat from turning on.

Food dries out in proof setting.

- Cover food with lid or aluminum foil.

SERVICE

- Maintain the quality built into your product by contacting Wolf factory certified service.
- When contacting service, you will need the model and serial number of your product. Both numbers are listed on the product rating plate. Refer to page 4 for rating plate location.
- For warranty purposes, you will also need the date of installation and name of your authorized Wolf dealer. This information should be recorded on page 2.