

MULTIFUNCTION COOKTOP INSTALLATION GUIDE



Contents

- 2 Multifunction Cooktop
- 3 Specifications
- 4 Installation
- 5 Troubleshooting

Features and specifications are subject to change at any time without notice.

Important Note


To ensure this product is installed and operated as safely and efficiently as possible, take note of the following types of highlighted information throughout this guide:

IMPORTANT NOTE highlights information that is especially important.

CAUTION indicates a situation where minor injury or product damage may occur if instructions are not followed.

WARNING states a hazard that may cause serious injury or death if precautions are not followed.

IMPORTANT NOTE: Save these instructions for the local electrical inspector.

 **WARNING**


FOR AUSTRALIA ONLY:

- Do not use or store flammable materials in the appliance storage drawer or near this appliance.
- Do not spray aerosols in the vicinity of this appliance while in operation.
- Do not modify this appliance.
- This appliance is for indoor use only.
- A ventilation unit is suggested for use with this appliance. Refer to the instructions shipped with the ventilation unit for proper clearances.
- If the information in the guide is not followed, a fire or explosion may result, causing property damage, personal injury or death.
- This appliance must be properly installed and serviced by a qualified installer, service agency or gas supplier and grounded (earthed) by a qualified technician.

Product Information

Important product information including the model and serial number are listed on the product rating plate. The rating plate is located on the bottom of the cooktop. Refer to the illustration below.

If service is necessary, contact Wolf factory certified service with the model and serial number.

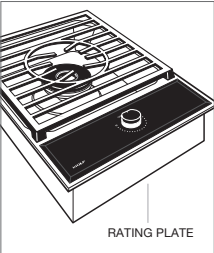

Rating plate location.

Installation Requirements

A minimum 51 mm is required from the bottom of the cooktop to combustible materials. If the cooktop is installed above an oven, a minimum of 6 mm is required between units. Refer to the illustration on page 6 for additional minimum clearances.

⚠ WARNING

Failure to locate the cooktop without proper clearances will result in a fire hazard.

Electrical

Installation must comply with all applicable electrical codes and be properly grounded (earthed).

Locate the electrical supply as shown in the illustration on page 6. A separate circuit, servicing only this appliance is required. A ground fault circuit interrupter (GFCI) is not recommended and may cause interruption of operation.

When multiple cooktops or modules are installed side by side, each unit must have its own separate recommended electrical circuit.


ELECTRICAL REQUIREMENTS	
Electrical Supply	220-240 V AC, 50/60 Hz
Service	10 amp dedicated circuit
Receptacle	grounding-type (earthed)
Power Cord	1.8 m

IMPORTANT NOTE: Connection of this appliance should be through a fused connection unit or a suitable isolator, which complies with national and local safety regulations. The on/off switch should be easily accessible after the appliance has been installed. If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles of the power supply. When switched off there must be an all pole contact gap of 3 mm in the isolator switch. This 3 mm contact disconnect gap must apply to any isolator switch, fuses and/or relays according to EN60335.

⚠ WARNING

FOR AUSTRALIA ONLY:

 This appliance is supplied with a cord and can be hard wired to a terminal box or plug. Do not remove the ground (earthed) plug.



Gas Supply

Installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code.


Locate the gas supply as shown in the illustration on the following page.

The cooktop is equipped for use with natural or liquid propane (LP) gas. The product rating plate has information on the type of gas that should be used. For rating plate location, refer to the illustration below. If this information does not agree with the type of gas available, check with the local gas supplier.

Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible. The adjustment conditions for this appliance are stated on the label (or rating plate). The data plate can be found on the underside of the cooktop.

This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.

The cooktop must be connected to a regulated gas supply. The supply line must be equipped with an approved external gas shut-off valve located near the cooktop in an accessible location. Do not block access to the shut-off valve. Refer to the illustration below.

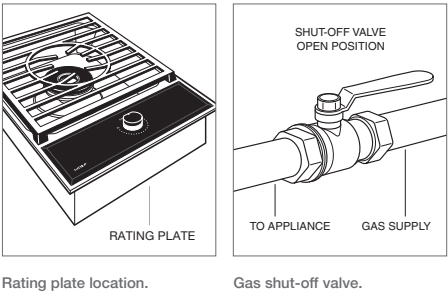

A gas supply line of 19 mm rigid pipe must be provided to the cooktop. If local codes permit, a certified, .9 m long, 13 mm or 19 mm ID flexible metal appliance connector is recommended to connect the units 1/2" NPT (or ISO 7/1-14) male inlet to the gas supply line. Pipe joint compounds, suitable for use with natural or LP gas should be used.

The appliance and its shut-off valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures in excess of 3.5 kPa. The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the system at test pressures equal to or less than 3.5 kPa.

Wolf natural gas cooktops will function up to 3124 m in altitude without adjustment and LP gas cooktops will function up to 2621 m. If the installation exceeds these elevations, contact your authorized Wolf dealer for a high altitude conversion kit.

⚠ WARNING

FOR AUSTRALIA ONLY:

- The appliance must be connected to a regulated gas supply with an approved regulator.
- This appliance can be installed using a 10 mm diameter 1000 mm flexible hose assembly complying with AS/NZS 1869, Class 'B'. Maximum working pressure 14 kPa, ambient temperature: -20°C to 125°C and AGA approved. The hose is not provided with the appliance.
- If installing with a flexible hose, verify the hose is not kinked or can be damaged. If installing above and oven, use a hose that will not be damaged by the heat from the oven.
- Failure to locate this appliance without proper clearances will result in a fire hazard.
- Adjust the inlet pressure regulator until the test point pressure is 1 kPa for NG and 2.75 kPa for Propane with 2 semi rapid burners set at maximum rate. Apply the self-adhesive data plate provided. It is the responsibility of the installer to test the operation of the cooktop upon completion and leave this manual with the product.

SPECIFICATIONS

Gas Supply


GAS RATING					
MODEL	TOTAL HEAT OUTPUT	GAS UNITS	APPLIANCE CATEGORY	TYPES AND PRESSURE (mbar)	COUNTRY OF DESTINATION
ICBMM15T/S ICBMM15TF/S	8	kW	I2H	G20 at 20	AT, CZ, DK, FI, GR, HR, IS, IE, IT, PT, SK, SI, ES, SE, CH, TR, GB, EE, LV, LT, NO, RO
			I2E	G20 at 20	DE, LU
			I2E+	G20 at 20/25	BE, FR
ICBMM15T/S/LP ICBMM15TF/S/LP	572	g/h	I3P	G31 at 37	CH, CZ, DE, IT, ES, FI, GR, GB, NL, SK, IE, SI, RO, PL, LV, LT

GAS RATING—AUSTRALIA ONLY				
MODEL	GAS TYPE	GAS PRESSURE	MJ/h	INJECTOR
ICBMM15TF/S	Natural	1.0 kPa	25	2.30 mm
	LP	2.75 kPa	25	1.34 mm


Note: Commissioning Proccedure is with Wok burner set to maxium setting.

Multifunction Cooktop


INSTALLATION

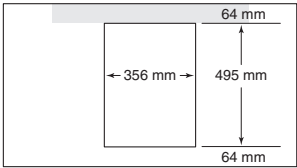

COUNTERTOP CUT-OUT

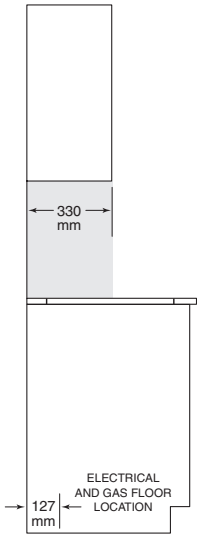

SIDE VIEW

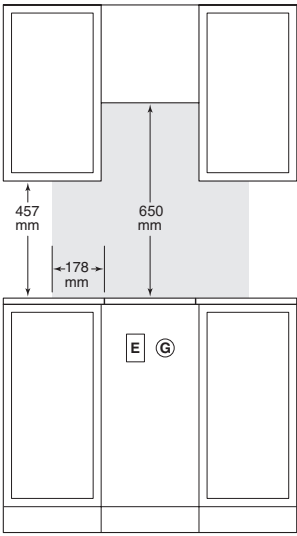

FRONT VIEW

NOTE: Shaded area above countertop indicates minimum clearance to combustible surfaces, combustible materials cannot be located within this area.


The height from the benchtop to the top of the trivet (Pan Support) is 34mm.

INSTALLATION

Cooktop Installation

Remove cooktop and components from the shipping package and recycle packing materials.

- 1 Lower the cooktop into the countertop cut-out. Center the cooktop in the opening with the front edge aligned parallel to the front edge of the countertop. Using a pencil, outline the rear edge of the cooktop on the countertop. Remove the cooktop.
- 2 Apply the foam strip to the perimeter of the countertop opening. Refer to the illustration below. Do not seal the cooktop to the countertop.
- 3 Insert the cooktop into the opening, aligning the rear edge with the pencil line. Verify the cooktop is aligned with the front edge of the countertop.
- 4 To attach brackets to the sides of the cooktop, insert clips into the side punchouts and press down. Install clamping screws into the brackets and tighten until screws contact the underside of the countertop. Do not overtighten. Refer to the illustration below.

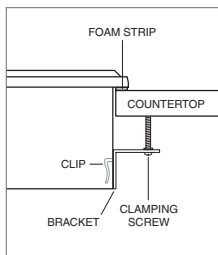

Cooktop installation.

Gas Supply Connection

All connections to the gas piping must be wrench-tightened. Do not overtighten or allow pipes to turn when tightening.

- 1 If a flexible metal connector is being used, verify it is not kinked, then attach the gas supply line to the regulator on the cooktop.
- 2 Open the valve and check for leaks by placing a liquid detergent solution onto all gas connections. Bubbles around connections indicate a gas leak. If a leak appears, close the shut-off valve and adjust connections.

Troubleshooting

IMPORTANT NOTE: If the cooktop does not operate properly, follow these troubleshooting steps:

- Verify electrical power is supplied to the cooktop.
- Verify the gas supply shut-off valve is in the open position.
- If the cooktop does not operate properly, contact Wolf factory certified service. Do not attempt to repair the cooktop. Wolf is not responsible for service required to correct a faulty installation.