

Operating instructions

DSTS9

Range hood

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

Validity

These operating instructions apply to:

Type	Model number	Size system
DSTS9	64004	90

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	4	8	Disposal	18
1.1	Symbols used.....	4	9	Index	20
1.2	General safety precautions.....	4	10	Notes	22
1.3	Appliance-specific safety precautions	4	11	Service & Support	23
1.4	Instructions for use.....	5			
2	Appliance description	7			
2.1	Appliance description.....	7			
2.2	Extraction mode.....	7			
2.3	Recirculation mode with long-life activated charcoal filter	7			
2.4	Recirculation mode with recirculation box.....	7			
2.5	Operating and display elements.....	7			
2.6	Features.....	8			
2.7	Construction	8			
3	Operating the appliance	9			
3.1	Operation	9			
3.2	Illumination	9			
3.3	Changing the light intensity	9			
3.4	Intensive level.....	10			
3.5	After-running time	10			
3.6	Wipe protection.....	10			
3.7	CleanAir.....	10			
3.8	Saturation indicators	11			
4	Care and maintenance	11			
4.1	Cleaning the housing.....	11			
4.2	Metal grease filters.....	12			
4.3	Long-life activated charcoal filter	13			
4.4	Long-life activated charcoal filter display	14			
4.5	Cleaning the long-life activated charcoal filter	14			
4.6	Recirculation box (optional).....	14			
5	Trouble-shooting	15			
5.1	What to do if	15			
6	Accessories and spare parts	16			
7	Technical data	16			
7.1	Product fiche	16			

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the Operating Instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time.



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions

- The room must be adequately ventilated when operating the range hood at the same time as other appliances that burn gas or other fuels.
- Observe the official regulations for the exhaust-air layout.

- The extracted air must not be fed into a chimney which is used for exhausting fumes from appliances burning gas or other fuels.
 - The minimum distance between the supporting surface for the cooking equipment on the hob and the lowest part of the range hood must be observed. See the installation instructions for this.
 - **WARNING:** Before replacing the light bulb, ensure the appliance is switched off and disconnected from the mains power supply to avoid possible electric shock.
 - When replacing a light bulb, the maximum wattage rating of replaceable light bulbs must be visible.
 - This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops, offices and other commercial establishments; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments.
 - Do not operate the appliance using an external time switch or a separate remote control system.
 - Failure to follow the cleaning instructions may cause a fire hazard.
 - Do not flambé food underneath the range hood.
- ### 1.4 Instructions for use
- #### Before using for the first time
- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.
 - Observe the official regulations for the exhaust-air layout.
 - Dispose of the packaging material in accordance with local regulations.
- #### Correct use
- The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.
 - Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its customer service department or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case a repair is needed, follow the instructions given in the 'Service & Support' section. Contact our Customer Services if necessary.
 - Use original spare parts only.
 - Retain these operating instructions for future reference.

Note on use

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not functioning properly, disconnect it from the power supply immediately.
- Ensure there is adequate ventilation when the extractor fan is on so as to avoid creating underpressure in the kitchen and to achieve optimal air extraction.
- Avoid a cross-current of air, which could blow the cooking vapours over the cooking area.
- If other appliances – fired by gas or other fuels – are being used at the same time, ensure that there is a sufficient supply of fresh air. This does not apply to air recirculation appliances.
- If other firing systems are being used at the same time (e.g. wood, gas, oil or coal fired heating appliances), safe operation is only possible providing a room negative pressure of 4 Pa (0.04 mbar) is not exceeded at the location of the appliance. Risk of toxic fumes! An adequate flow of fresh air must be guaranteed e.g. via non-closable openings in doors or windows and in combination with an air-intake/exhaust-air wall box or by other technical means.
- When cleaning the appliance make sure no water gets inside it. Use a moderately damp cloth only. Do not spray the inside or outside of the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage.
- Accessible parts may become hot when used with cooking appliances.

Caution: Burns hazard!

- Do not leave the appliance unattended when deep-frying on the cooking surface. The cooking oil in the deep-frying appliance could overheat and catch fire. Constantly monitor the temperature of the cooking oil, keeping it below the temperature at which it can catch fire. Change the cooking oil regularly – dirty oil catches fire more easily than clean oil.

Caution: Risk to life!

- Packaging material, e.g. plastic film and polystyrene, can be dangerous for children and animals. Danger of suffocation! Keep packaging material away from children and animals.
- When carrying out maintenance work on the appliance, including replacing light bulbs, cut off the electricity supply to the appliance: remove the screw fuse from the holder or switch the circuit breaker off, or disconnect from the mains supply.

How to avoid damaging the appliance

- Observe the cleaning intervals. Failure to do so can increase the fire hazard due to the build-up of grease in the metal grease filters.

2 Appliance description

2.1 Appliance description

The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.

The model can be used to extract or recirculate air.

2.2 Extraction mode

A fan draws cooking fumes and smells from above the cooking area. The metal grease filters clean the extracted air, which is passed through a connecting pipe fitted with an integrated non-return valve and through the air duct to the outside.



When in use, ensure there is a sufficient supply of fresh air to replace the air that is being extracted.

2.3 Recirculation mode with long-life activated charcoal filter











The cooking fumes and smells above the cooking area are passed through the metal grease filters and long-life activated charcoal filters, the odours are largely removed from the air and it is then circulated back into the room.

2.4 Recirculation mode with recirculation box

After being filtered through the metal grease filters, the cooking fumes and smells above the cooking area are passed through a recirculation box with integrated activated charcoal filters, the odours are largely removed from the air and it is then circulated back into the room.

2.5 Operating and display elements



-  Switch on/off, extend/retract hood body
-  Power level 1
-  Power level 2, activate/deactivate wipe protection
-  Power level 3
-  Intensive level
-  CleanAir function (air extraction every hour for 10 minutes)
-  After-running time (delays switching-off of appliance by 15 minutes)
-  Touch button, switch illumination on at maximum intensity and off. Press the button for 2 seconds to switch the illumination on at medium intensity.
-  Flashing: Clean the metal grease filters, reactivate or replace the long-life activated charcoal filters
-  Flashing: Replace the recirculation box.




Depending on the model and features, the specification of the appliance may differ from the standard specification described herein.

2.6 Features

- 1 extractor fan with 4 power levels
 - Level 1 = low, 2 = medium, 3 = high extraction rate
 - Power level 4 (intensive) is used for short bursts of intensive extraction of cooking smells and fumes, and is available for 6 minutes.
- 2 metal grease filters (extraction/recirculation mode)
- 2 long-life activated charcoal filters (recirculation mode)
- Recirculation box (optional)
- Illumination
- 1 panel, 1 mains cable, 2 holders (bottom), 2 holders (top), 2 angle brackets

2.7 Construction



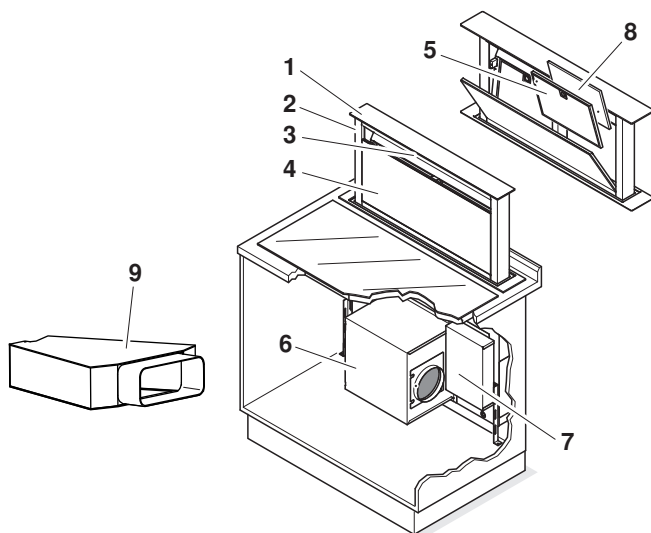

- | | |
|-------------------------------------|--|
| 1. Operating and display elements | Options |
| 2. Extendable/Retractable hood body | 8. Long-life activated charcoal filter (for recirculation air) |
| 3. Illumination | 9. Recirculation box (optional) |
| 4. Panel | |
| 5. Metal grease filter | |
| 6. Motor housing | |
| 7. Control unit | |



3 Operating the appliance

3.1 Operation



Extending and switching on the appliance

- ▶ Hold the  button depressed for 3 seconds.
 - The hood body is extended and the appliance switches on at power level .
- ▶ Touching the  or  button switches the appliance on at power level 1, 2, 3 or intensive.
 - The corresponding button illuminates to indicate which power level is being used.



We recommend switching the appliance on at power level 2 some five minutes before starting to cook. Use a low power level for normal cooking smells and a higher power level for very strong cooking fumes and smells.

Switching off the appliance and retracting the hood

- ▶ Touching the  button switches the appliance off.
- ▶ Hold the  button depressed for 3 seconds.
 - The hood body is retracted.





After you have finished cooking, allow the appliance to run for another 15 minutes (see page 10) so that the cooking fumes and smells can be extracted.






Do not put your hands into the hood when the hood body is moving.






3.2 Illumination

- ▶ Touch the  button.
 - The illumination switches on at maximum intensity.
- ▶ Touch the  button again.
 - The illumination switches off.

3.3 Changing the light intensity

- ▶ When the illumination is switched on, hold the  button depressed for two seconds.
 - The light intensity lowers.
- ▶ When the light intensity is low, press the  button.
 - The light intensity increases.
- The illumination switches off if, prior to this, the  button has been held depressed for two seconds when the light intensity is low or if it is pressed when the light intensity is normal.







3.4 Intensive level

- ▶ Touch the  button.
 - The  button flashes.
 - The intensive level switches on.
- If another power level had been running beforehand, then the appliance will automatically revert to this power level after six minutes has elapsed.
- If the appliance had not been switched on beforehand, then the appliance will automatically switch off after the six minutes has elapsed.
- ▶ Touch the  or  button.
 - The  button stops flashing.
 - The intensive level switches off before time.

3.5 After-running time

 


In the after-running time, the motor, fan blades and illumination run for another 15 minutes and then switch off automatically.

- ▶ Touch the  or  button and select the desired power level.
- ▶ Touch the  button.
 - The after-running time switches on.
 - The  button illuminates for 15 minutes.
- ▶ Touch the  button again.
 - The  button no longer illuminates.
 - The after-running time switches off before time.

3.6 Wipe protection


Activating wipe protection

- ▶ With the appliance is switched off, hold the  button depressed for five seconds.
 - Wipe protection is activated, all the buttons flash in sequence from left to right.








 

Wipe protection is useful when cleaning the appliance.

Deactivating wipe protection

- ▶ Hold the  button depressed for five seconds.
 - Wipe protection is deactivated.

3.7 CleanAir

Switching the CleanAir function on/off

- ▶ Touch the  button.
 - The  level illuminates.
 - The  button flashes.
 - The appliance switches on every hour for 10 minutes.
- ▶ Touch the  or  button.
 - The  button and the  level no longer illuminate.
 - The CleanAir function switches off.

3.8 Saturation indicators

Saturation indicator for metal grease filters and long-life activated charcoal filters



The ↶ and ■ buttons flash after 100 operating hours.

The saturation level has been reached and the metal grease filters and long-life activated charcoal filters must be cleaned.

Activating/Deactivating the saturation indicator (recirculation mode)

- ▶ Hold the ⌚ button depressed for 5 seconds.
 - The recirculation mode is activated.
- ▶ Hold the ⌚ button depressed for 5 seconds to deactivate the recirculation mode.
 - The recirculation mode is deactivated.

Saturation indicator for recirculation box



The ↶ and ■ buttons flash after 300 operating hours.

The saturation level has been reached and the recirculation box must be replaced.

Resetting the saturation indicator

- ✓ The metal grease filters have been cleaned.
- ✓ The recirculation box has been replaced.
- ✓ The long-life activated charcoal filters have been cleaned or replaced.
- ▶ With the appliance switched off, hold the ↶ button depressed until all the LEDs flash three times.

4 Care and maintenance

4.1 Cleaning the housing



Take care that no water gets into the housing of the appliance! If water gets into the housing, it can cause damage.

Do not use abrasive cleaners, scouring pads, steel wool, etc. for cleaning, as the surface could otherwise be damaged.

Remove the screw fuse or switch off the circuit breaker.

Cleaning the outside/inside

- ▶ With the appliance switched off, hold the ■ button depressed for five seconds.
 - Wipe protection is activated, all the buttons flash in sequence from left to right.
- ▶ Clean the outside with a slightly damp cloth and neutral cleaning agent, then wipe dry. Grease and condensate water can build up on the inside around the metal grease filters.
- ▶ Clean the inside with a slightly damp cloth and neutral cleaning agent, then wipe dry.
- ▶ After cleaning, hold the ■ button depressed for five seconds.
 - Wipe protection is deactivated.


4.2 Metal grease filters



The metal grease filters can be cleaned.


Removing the metal grease filters


- ▶ Hold the panel **1** at the top **2** and pull forwards.
- ▶ Pull the handle **3** down and take out the metal grease filters **4**.

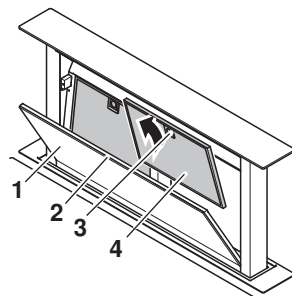

Do not drop or damage the metal grease filters.

 Cleaning the metal grease filters

The metal grease filters **4** must be cleaned at least once a month with normal use or whenever the  indicator light flashes.

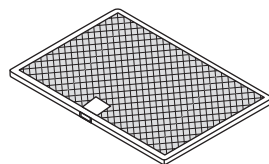

- ▶ Clean the metal grease filters **4** in the dishwasher.
- ▶ Select an «intensive» – or «heavy» – wash programme with a warm pre-wash.






Cleaning may cause the metal grease filters to become discoloured. This will not affect the functioning of the filters in any way.

If no dishwasher is available:

- ▶ Clean the metal grease filters in hot water and detergent.
- ▶ Soak the metal grease filters in hot water and detergent for about two hours, then clean with a washing-up brush and rinse well with cold water.

Installing the metal grease filters


- ▶ Insert each of the metal grease filters **4** into the holder **5**.
- ▶ Pull handle **3** down and allow the metal grease filter **4** to engage.
- ▶ Hold the panel **1** at the top **2** and push to.
- ▶ With the appliance switched off, hold the  button depressed until all the LEDs flash three times.
 - The flashing  button goes out.

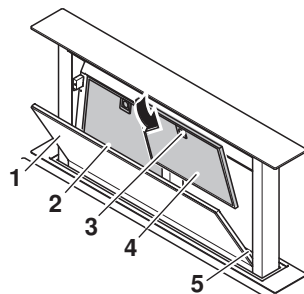

Removing the panel

The panel is kept in place by magnets.

- ▶ Hold the panel **1** at the top **2** and pull forwards.
- ▶ Release the panel at the bottom and pull it out.

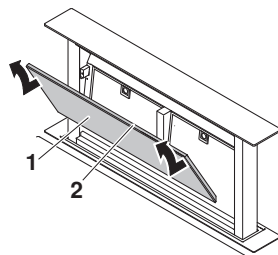

Cleaning the panel




The panel is not suitable for washing in a dishwasher.

- ▶ Clean the panel with a slightly damp cloth and neutral cleaning agent, then wipe dry.

Installing the panel

- ▶ Hold the panel **1** at the top **2**, hook in at the bottom and insert into position.

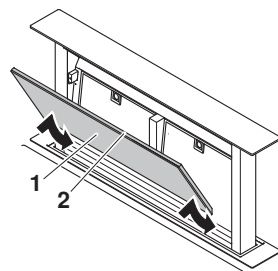


4.3 Long-life activated charcoal filter

The long-life activated charcoal filters should be reactivated every other month or whenever the cooking fumes and smells are no longer being filtered effectively. After about three years the long-life activated charcoal filter must be replaced because its ability to absorb odours will be reduced.

Installing/removing the long-life activated charcoal filters

- ▶ Release the holder **4** on the back of the metal grease filter **3** and remove the long-life activated charcoal filter **5**.
- ▶ Clean/reactivate.
- ▶ Insert the new long-life activated charcoal filter **5** and fasten with the holder **4** on the back of the metal grease filter **3**.

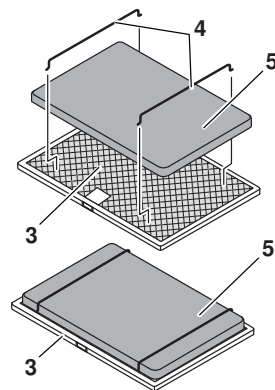




Dispose of long-life activated charcoal filters that are spent and can no longer be reactivated in the household waste.

4.4 Long-life activated charcoal filter display


Activating the long-life activated charcoal filter display



This function must only be activated with the recirculation mode.

- ▶ With the appliance switched off, hold the  button depressed for 5 seconds.
 - All LEDs flash twice.
 - The long-life activated charcoal filter display is activated.


Deactivating the long-life activated charcoal filter display

- ▶ With the appliance switched off, hold the  button depressed for 5 seconds.
 - All LEDs flash once.
 - The long-life activated charcoal filter display is deactivated.

4.5 Cleaning the long-life activated charcoal filter



Long-life activated charcoal filters are only used with the recirculation mode.

The long-life activated charcoal filter can be cleaned and reactivated. With normal use the long-life activated charcoal filter should be cleaned every other month or whenever the  indicator light flashes. It can be cleaned in a dishwasher at 65°C (select an «intensive» or «heavy soiling» wash programme). Wash the filter separately so that it does not become clogged with food particles. If it is not possible to wash the filter in a dishwasher, soak it in 60°C water with a little washing-up liquid for one hour. Then rinse well. To reactivate the activated charcoal, dry the filter without the frame in the oven.

- ▶ Select top/bottom heat or hot air and set the temperature to 100 °C. Place the filter on a wire shelf and allow to dry for 60 minutes.



After about 3 years the long-life activated charcoal filter must be replaced because its ability to absorb odours will be reduced. The spent long-life activated charcoal filter can be disposed of in the household waste.

 
4.6 Recirculation box (optional)

Recirculation mode with recirculation box



The recirculation box with integrated activated charcoal filters is only used in the recirculation mode.

An activated charcoal filter becomes less effective with use. With normal use, the recirculation box should be replaced every 2 years. It cannot be washed or regenerated.



5 Trouble-shooting

5.1 What to do if ...


... the illumination is not working

Possible cause	Solution
<ul style="list-style-type: none"> Fuse or automatic circuit breaker for electrical installations in the home is defective. 	<ul style="list-style-type: none"> ▶ Replace the fuse. ▶ Reset the automatic circuit breaker.
<ul style="list-style-type: none"> An interruption in the power supply. 	<ul style="list-style-type: none"> ▶ Check the power supply.
<ul style="list-style-type: none"> LED is defective. 	<ul style="list-style-type: none"> ▶ Inform Customer Services.

... the appliance is not extracting enough air

Possible cause	Solution
<ul style="list-style-type: none"> Metal grease filters are dirty. 	<ul style="list-style-type: none"> ▶ Clean metal grease filters.
<ul style="list-style-type: none"> For recirculation mode: The long-life activated charcoal filters are saturated. 	<ul style="list-style-type: none"> ▶ Reactivate the long-life activated charcoal filters or replace them after 3 years.
<ul style="list-style-type: none"> For recirculation mode: The recirculation box is saturated. 	<ul style="list-style-type: none"> ▶ Replace the recirculation box.


... Saturation indicator illuminates

Possible cause	Solution
<ul style="list-style-type: none"> Metal grease filters are dirty. 	<ul style="list-style-type: none"> ▶ Clean metal grease filters.
<ul style="list-style-type: none"> For recirculation mode: The long-life activated charcoal filters are saturated. 	<ul style="list-style-type: none"> ▶ Reactivate the long-life activated charcoal filters or replace them after 3 years.
<ul style="list-style-type: none"> For recirculation mode: The recirculation box is saturated. 	<ul style="list-style-type: none"> ▶ Replace the recirculation box.
	<p>Valid for all three filter models.</p> <ul style="list-style-type: none"> ▶ After cleaning, hold the  button depressed for at least 5 seconds. ▶ The display goes out.


6 Accessories and spare parts

Please give model number of the appliance and exact designation of the accessory or spare part when ordering parts.


Metal grease filter

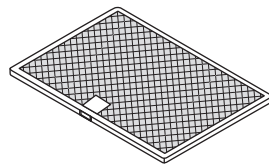

Long-life activated charcoal filter

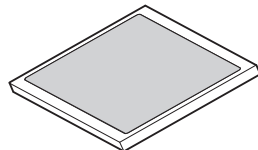

Recirculation box

 

7 Technical data

Electrical connection

- ▶ See identification plate.
 - ▶ Remove the metal grease filters.
 - The identification plate is located on the inside of the appliance.

7.1 Product fiche

In accordance with EU Regulation No. 65/2014 and No. 66/2014.

Description	Abbreviations	Unit	Value
Brand	S	-	V-ZUG Ltd
Model identifier	M	-	64004
Annual Energy Consumption	AEC _{hood}	kWh/a	62.1
Energy Efficiency Index	EEI _{hood}	%	60.1
Energy Efficiency Class	EEC	-	B
Fluid Dynamic Efficiency	FDE _{hood}	%	27.05
Fluid Dynamic Efficiency Class	FDEC	-	B
Lighting Efficiency	LE _{hood}	lux/W	28.1
Lighting Efficiency Class	LEC	-	A
Grease Filtering Efficiency	GFE _{hood}	%	70.0

Grease Filtering Efficiency Class	GFEC	-	D
Air flow at minimum speed	Q_{\min}	m ³ /h	280
Air flow at maximum speed (intensive or boost excluded)	Q_{\max}	m ³ /h	420
Air flow at intensive or boost setting	Q_{boost}	m ³ /h	670
Airborne acoustical A-weighted Sound Power Emissions at minimum speed	SPE_{\min}	dBA	49
Airborne acoustical A-weighted Sound Power Emissions at maximum speed	SPE_{\max}	dBA	57
Airborne acoustical A-weighted Sound Power Emissions at intensive or boost setting	SPE_{boost}	dBA	69
Measured power consumption of off mode	P_0	W	0.49
Measured power consumption of standby mode	P_s	W	-
Time increase factor	f	-	1.0
Measured air flow rate at the best efficiency point	Q_{BEP}	m ³ /h	348.0
Measured air pressure at the best efficiency point	P_{BEP}	PA	431.0
Measured value of the electric power input at the best efficiency point	W_{BEP}	W	154.0
Nominal power of the lighting system	W_L	W	6.0
Average illumination of the lighting system over the cooking surface	E_{middle}	lux	170
Sound power level	L_{wa}	dBA	57

8 Disposal

8.1 Packaging



Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.


8.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):





- ▶ Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.

8.3 Disposal



-  The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

Addresses of the importers

			
AU/NZ	V-ZUG Australia Pty. Ltd. 2/796 High Street Kew East, Victoria 3102, AUSTRALIA	LB	Kitchen Avenue SAL Mirna El Chalouhi Highway Wakim Bldg, Jdeihah Beirut LEBANON
CN	V-ZUG (Shanghai) Domestic Appliance Co. Ltd. Raffles City Changning Office Tower 3 No. 1139 Changning Road 200051 Shanghai CHINA	RU	OOO Hometek Dubininskaya Street 57 building 1 113054 Moscow RUSSIA
AT/BE/ DK/DE/ ES/FR/ NO/NL/ LU/SE	V-ZUG Europe BV Evolis 102 8530 Harelbeke BELGIUM	SG	V-ZUG Singapore Pte. Ltd. 6 Scotts Road Scotts Square #03-11/12/13 228209 Singapore SINGAPORE
GB/IE	V-ZUG UK Ltd. One Pancras Square Gridiron Building N1C 4G London GREAT BRITAIN	TH	V-ZUG (Thailand) Ltd. 140/36, 17th Floor ITF Tower, Silom Road Suriyawong Sub-district Bangrak District Bangkok 10500 THAILAND
HK/MO	V-ZUG Hong Kong Co. Ltd. 12/F, 8 Russell Street Causeway Bay HONG KONG	TR	GÜRELLER Anchor Sit.3A/1-2 Çayyolu 06690 ÇANKAYA/ANKARA TURKEY
IT	Frigo 2000 S.p.A Viale Fulvio Testi 125 20092 Cinisello Balsamo (Mil- ano) ITALY	UA	Private enterprise "Stirion" (MIRS corp.) Osipova Street 37 65012 Odessa UKRAINE
IL	Digital Kitchen Hataarucha 3 6350903 Tel Aviv ISRAEL	VN	V-ZUG VIETNAM COMPANY LTD. 21st Floor, Saigon Centre, 67 Le Loi Ben Nghe Ward, District 1 Ho Chi Minh City, 700000 VIETNAM

9 Index

A		
Accessories and spare parts	16	
Addresses of the importers	19	
After-running time.....	10	
Appliance		
Disposal.....	18	
Operating	9	
Appliance description	7	
C		
Care and maintenance	11	
CleanAir	10	
Cleaning the inside.....	11	
Cleaning the outside	11	
Construction.....	8	
D		
Display elements.....	7	
Disposal.....	18	
E		
Electrical connection	16	
Equipment	8	
Extending the appliance	9	
Extraction mode	7	
H		
Housing		
Cleaning	11	
I		
Identification plate.....	16	
Illumination	9	
Initial set-up.....	5	
Intensive level	10	
L		
Light intensity		
Changing.....	9	
Long-life activated charcoal filter		
Cleaning	14	
Installing	13	
Removing	13	
Replacing	14	
Long-life activated charcoal filter display		
Activating.....	14	
Deactivating	14	
M		
Malfunction		
Illumination not working.....	15	
Metal grease filters		
Cleaning	12	
Installing	12	
Removing	12	
Model designation	2	
N		
Notes	22	
O		
Operating elements.....	7	
P		
Panel		
Cleaning	13	
Installing	13	
Removing	13	
Product fiche.....	17	
R		
Recirculation box	14	
Recirculation mode		
Long-life activated charcoal filter		
.....	7	
Recirculation box.....	7	
Resetting metal grease filter saturation		
indicator	11	
S		
Safety precautions		
Before using for the first time.....	5	
Correct use	5	
Instructions for use.....	5	
Note on use	6	
Safety warnings		
Appliance-specific	4	
General	4	
Saturation indicator		
Activating.....	11	
Metal grease filters.....	11	
Saturation indicators		
Deactivating	11	
Service & Support.....	23	
Switching appliance on/off	9	
Symbols.....	4	
T		
Technical data	16	
Technical questions.....	23	
Type.....	2	
V		
Validity.....	2	

W

Warranty extensions..... 23

What to do if

 Saturation indicator illuminates..... 15

 The illumination is not working 15

Wipe protection

 Activating..... 10

 Deactivating 10

10 Notes

11 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your appliance straightaway online at www.vzug.com →Service →Warranty registration. This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (SN) and appliance designation to register your appliance. You will find them on the identification plate of your appliance.

My appliance information:

SN: _____ **Appliance:** _____

Please have this appliance information to hand when contacting V-ZUG. Thank you.

- ▶ Remove the metal grease filters.
 - The identification plate is located on the inside of the appliance.
 - A second identification plate is included in the scope of delivery and should be retained for the purpose of appliance identification.

Your repair order











At www.vzug.com →Service→Service number you will find the telephone number of your nearest V-ZUG service centre.

Technical questions, accessories, warranty extensions

V-ZUG is happy to help you with any general administrative or technical queries, to take your orders for accessories and spare parts and to inform you about our progressive service agreements.

Quick instructions



-  Switch on/off, extend/retract hood body
-  Power level 1
-  Power level 2, activate/deactivate wipe protection
-  Power level 3
-  Intensive level
-  CleanAir function (air extraction every hour for 10 minutes)
-  After-running time (delays switching-off of appliance by 15 minutes)
-  Touch button, switch illumination on at maximum intensity and off. Press the button for 2 seconds to switch the illumination on at medium intensity.
-  Flashing: Clean the metal grease filters, reactivate or replace the long-life activated charcoal filters
-  Flashing: Replace the recirculation box.



1017005-04

